

## XR500 Arming and Disarming Quick Reference

### Disarming the Alarm System


1. Press **CMD** until **ARM DISARM** displays.
2. Select **DISARM**, enter your user code and press **CMD**.
3. At **ALL? NO YES**, if you select **NO**, the keypad displays the name of each area followed by **NO YES**. Select **YES** or **NO** to disarm area(s) of your choice.

### Arming the Alarm System

1. Press **CMD** until **ARM DISARM** displays.
2. Select **ARM**, enter your user code if a closing code is required and press **CMD**.
3. At **ALL? NO YES**, if you select **NO**, the keypad displays the name of each area followed by **NO YES**. Select **YES** or **NO** to arm the area(s) of your choice.
4. **SYSTEM ON** or **ALL SYSTEM ON** displays.

**Note:** **SYSTEM ON** means at least one area in the system is armed.


**ALL SYSTEM ON** means all areas in the system are armed. The keypad begins counting down the exit time.

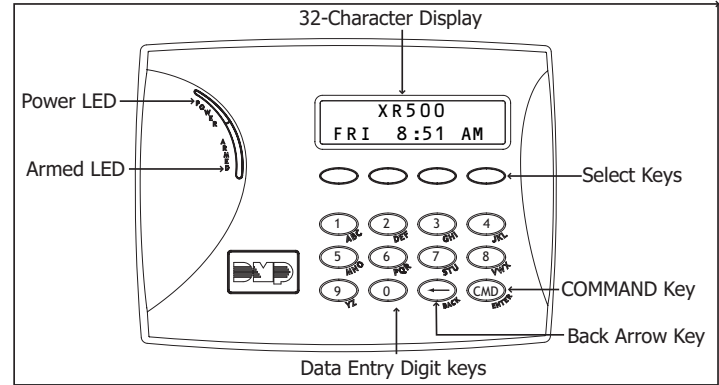


Keypad Layout and Function Keys



## Disarming Steps

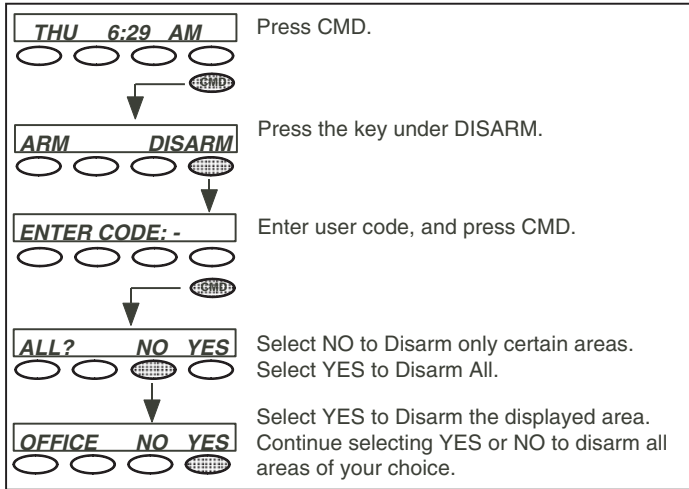

## Arming Steps

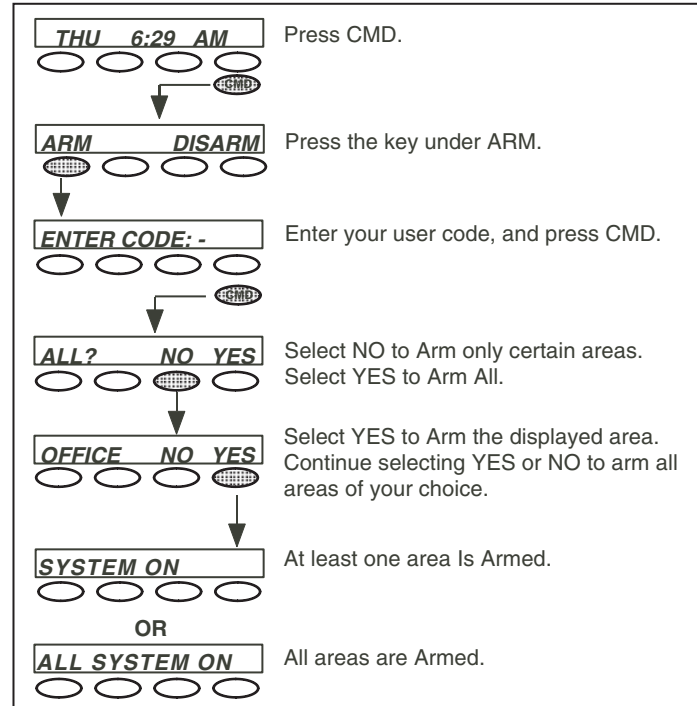

Digital Monitoring Products

800-641-4282

www.dmp.com

Made in the USA

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard

Springfield, Missouri 65803-8877

LT-0895 (8/06) © 2006 Digital Monitoring Products, Inc.

